

## **Maintenance:**

Cleaning: Dry mop/ sweep or vacuum.

If needed, damp mop with lerry cloth mop and a weak solution of cleaner and water. Inspect assembled floor properly. Remove damaged or loose components and make any necessary repairs to return floor to its original standards

Dance floor are designed for temporary outdoor use. Extended direct sunlight can cause panels and edges to fade , color changes are not covered by N.I.E warranty

Surface tamperutere should not be allowed to exceed 160 °F (71°C)

## **Notice:**

DO NOT use furniture on floor, specially metal furniture.

DO NOT use wet mops or wipes containing scaps, oil, polishes waxes.

DO NOT use strong cleaning agents or abrasive cleanners.

DO NOT oil or grease panel or trim locks as dirt may collect and jam the lock mechannism.

User assumes full responsibility for installation and use of all dance floor components.

