

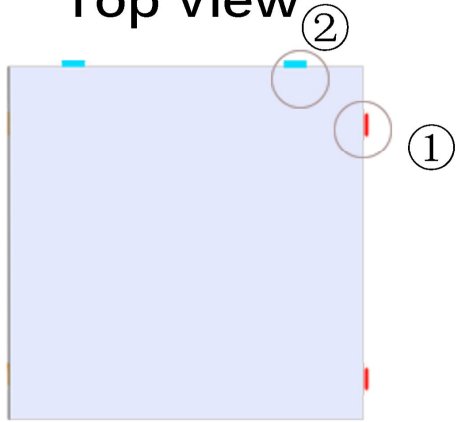



Top View

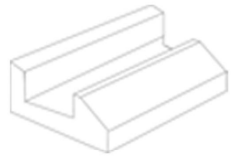

Bottom View

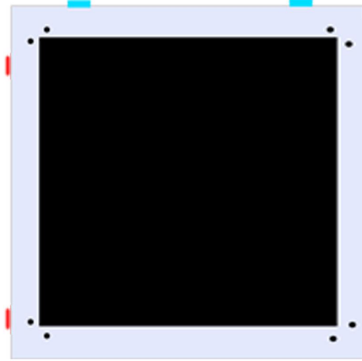

① Hook (Aluminum)

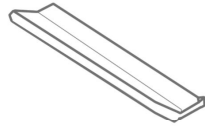


② Inter Lock

How to setup

First Row

Put it flatly by ① Hook. From left to right side

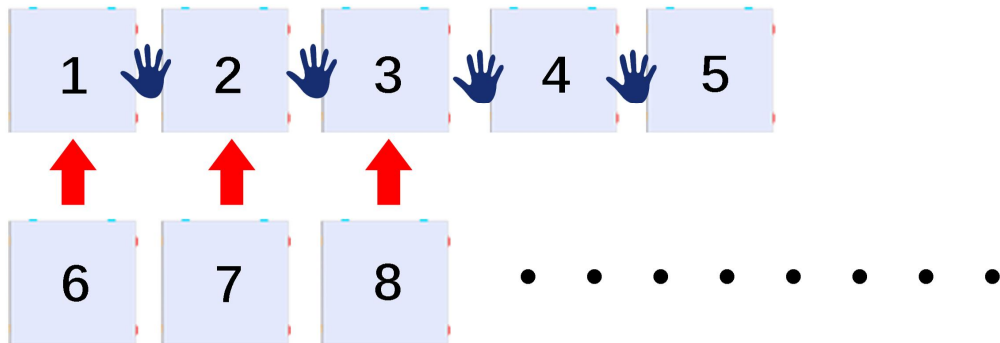


Next Rows


Clip panel into last row by ② Inter lock

How to Remove



Remove from last to start 10 - 9 - 8 - 7 - 6 - 5 - 4 - 3 - 2 - 1

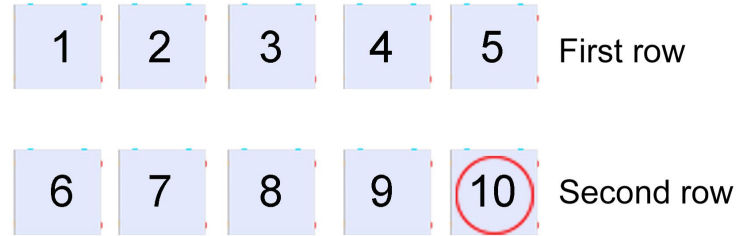

1st Step : Remove aluminum edge trims. then **MUST** find out the very last panel in the very last row.

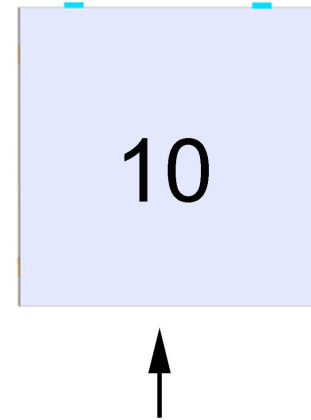

2n Step : Find the label marks : Lifting from this side

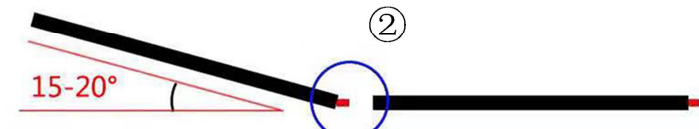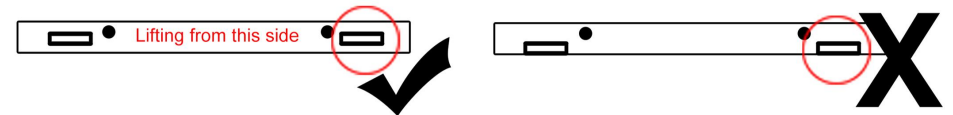

3rd Step : Lift the panel up in 15° angle, then ② interlock will be release correctly.